



Performance Distributors

HIGH PERFORMANCE & RACING IGNITION SYSTEMS
www.performancedistributors.com
901-396-5782



DYNA-MODULE INSTRUCTIONS

1. Carefully wipe clean the distributor housing surface onto which the module will be mounted.
2. Apply a liberal coat of grease from the enclosed tube onto the module flat metal mounting surface.
3. This special silicone grease acts to conduct heat away from the module.
4. Attach the module to the housing with the two screws and lockwashers.
5. Connect the pick-up coil leads to the module.
6. Attach the connector to the module

WARRANTY INFORMATION

Dyna-Modules, by Performance Distributors, Inc., upon inspection which indicates either materials or workmanship defects, will repair or replace part in question for a period of one year. This warranty does not cover damage to engine or other parts, personal injury, labor or any other damage or injury. Proof of the date of sale to the original consumer is required. If our product is found to be defective, and is still in warranty, the defective part will be replaced or repaired at no cost to the customer. Customer must pay shipping to us and we pay return shipping to customer regular ground UPS.

NOTE: In racing application, the warranty is limited to 30 days.